


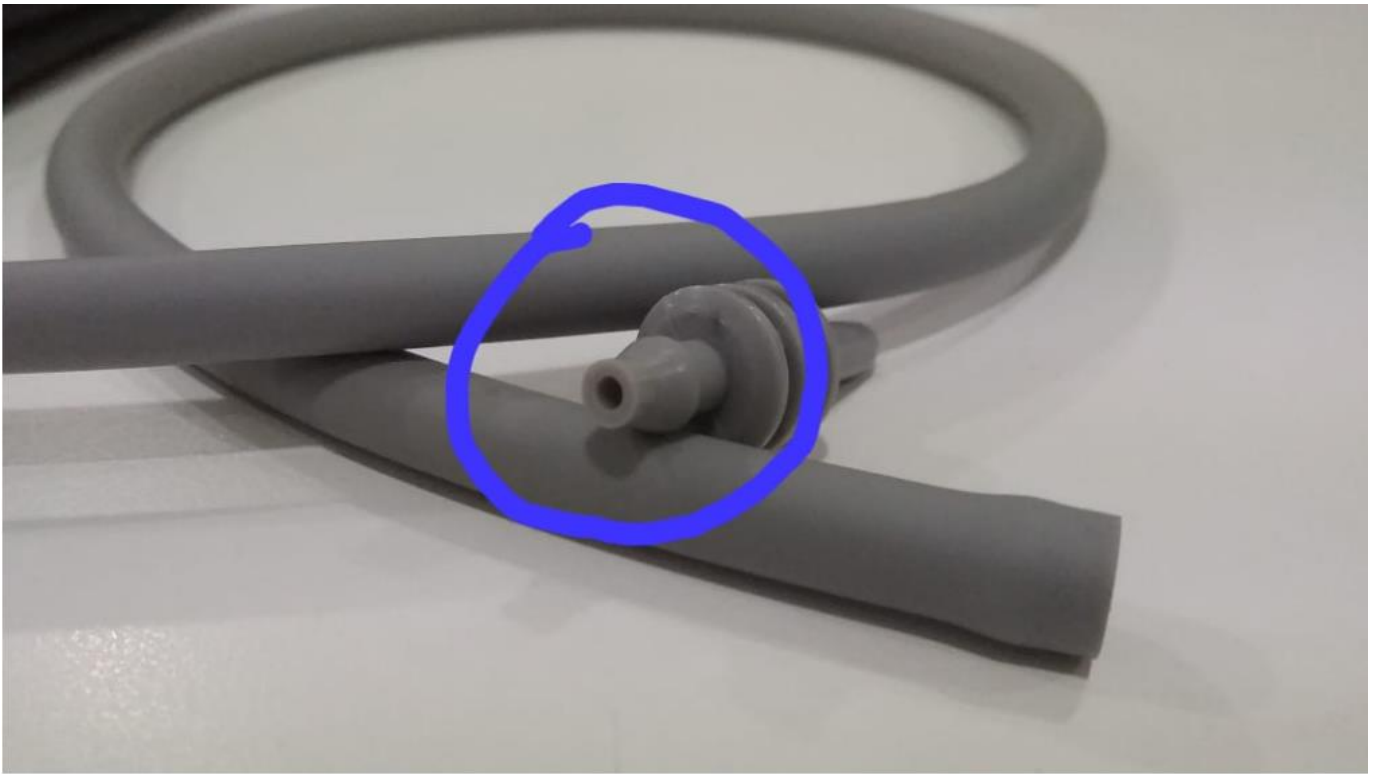


- First try to push air through this nozzle with mouth if cuff gets air and it goes proper then there is no issue in nozzle. If air is not getting in through this nozzle, then you have to remove this nozzle



- if it is white colour then you have to take something to get nozzle separate from tube.



- After removing nozzle check this hole, there may be solution on that hole that you can easily remove with your finger nail or with sharp object.

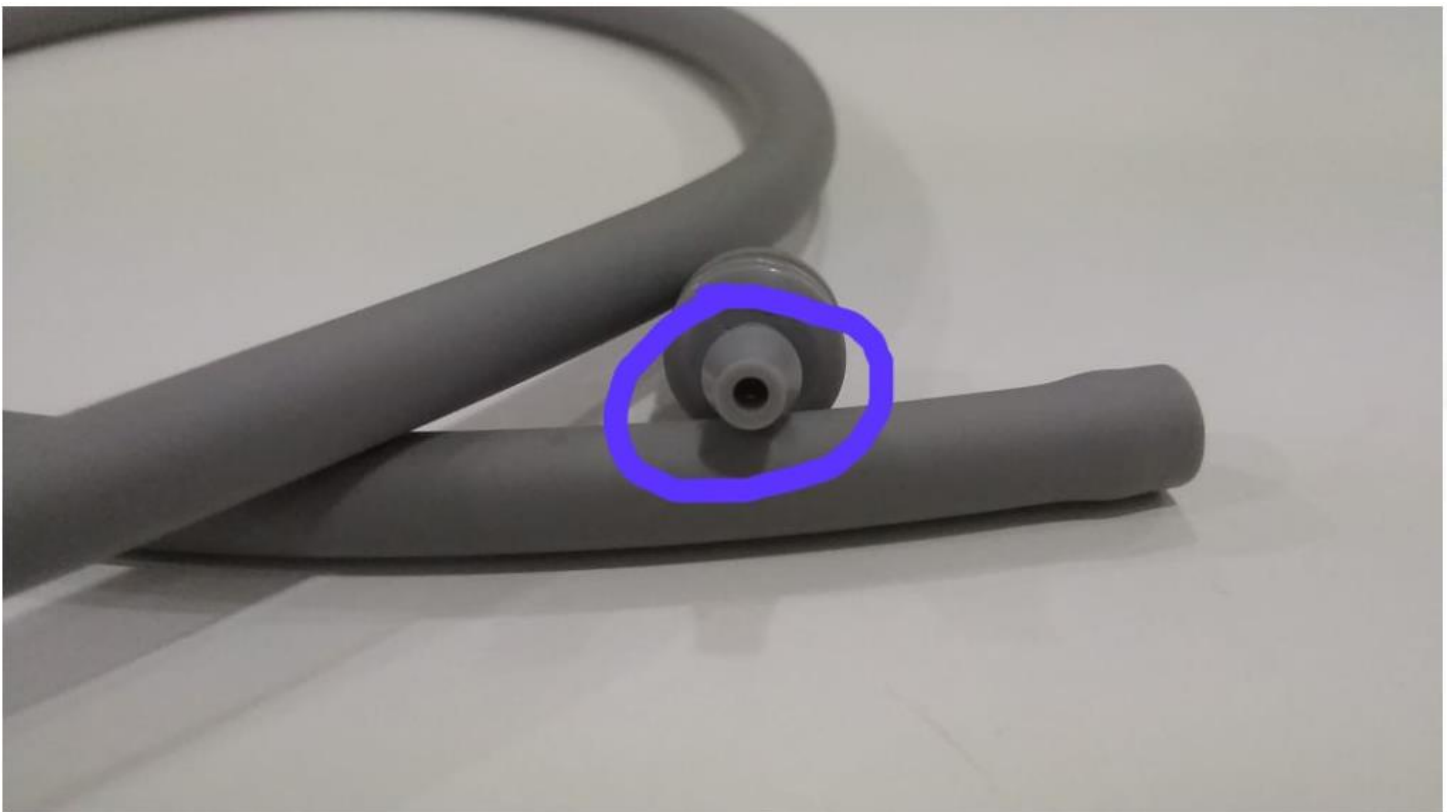

- After removing glue from tip of the nozzle hole you put it again in to tube and then check your Error - 5 will be solved.